


Repair Parts Sheet

Hydraulic Lock Grip Pullers. LGH-Series

Repair Parts Sheets	Revision	Revision Date	Product Code Beginning
L4257	Rev. A	11/2018	А

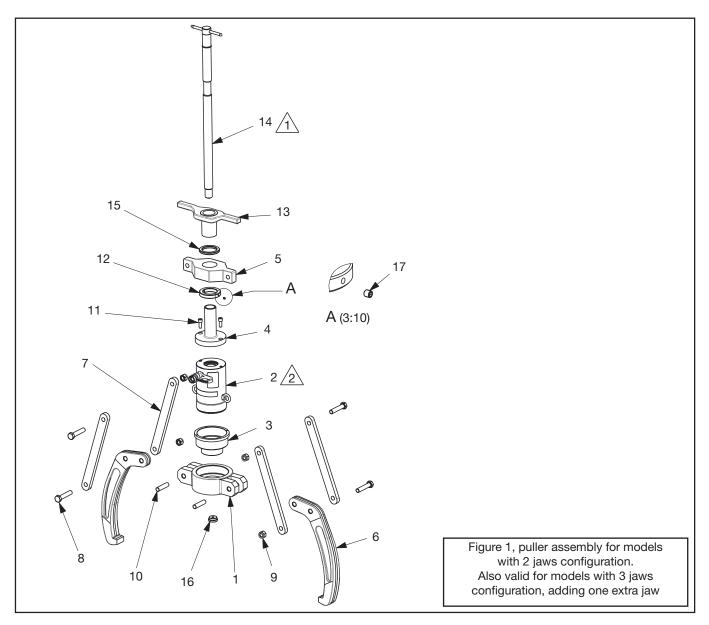

2

Note: See Page 2 for parts list.

Notes	
1	Apply Molykote 1122 to threads
2	A further breakdown of the hollow cylinders may be found on www.enerpac.com. For further information on the following cylinder assemblies, reference the appropriate cylinder models: - RWH121900 = cylinder model RWH121. Assembly also includes FZ1055 (reducer connector), DC1389900 (female coupler) and DD1782020 (dust cap). - RCH202901 = cylinder model RCH202. Assembly also includes HP2015 (threaded saddle).

	Repair Parts List, Fi	gure	1 with 2 jaws	s configurati	ion	L4257
Item Desc	Description	Qty.	Part Number			
	Description		LGH210	LGH214	LGM224	LGH253
1	Lower Body	1	*	%	^	##
2	Hydraulic assembly cylinder	1	RWH101B100	RWH121900	RCH202901	RCH513
3	Adaptor	1	n.a.	n.a.	n.a.	##
4	Threaded base	1	«	\$	®	δ
5	Upper body	1	+	&	!	**
6	Jaw	2	LGM211K4	LGH214K4	LGH224K4	LGH253K4
7	Strap	4	#	@	\$	\$\$
8	Jaw Screw	4	#	@	\$	\$\$
9	Nut	4	#	@	\$	\$\$
10	Pin	2	*	%	^	##
11	Base Screw	2	«	\$	®	δ
12	Support Nut	1	+	&	!	**
13	Handle + Cap	1	+	&	!	**
14	Spindle	1	LGH10K5	LGH14K5	LGH24K5	LGH253K5
15	Washer	1	n.a.	n.a.	n.a.	**
16	Point protector	1	SGM0704	LGH14K6	LGH24K6	LGH253K6
17	Set Screw	1	+	&	!	**
+ incl	Luded in LGH210K1 % included luded in LGM211K2 & included luded in LGH210K3 @ included	in LGH2	14K2 ! incl	luded in LGH224K1 luded in LGH224K2 luded in LGM224K3	** included	in LGH253K1 in LGH253K2 in LGH253K3

included in LGH10K7 ~

@ ٥ included in LGH14K7

\$ included in LGM224K3 ® included in LGH24K7

\$\$ included in LGH253K3 δ included in LGH253K7

Item	Description	Qty.	Part Number			
		Qiy.	LGM310	LGM314	LGM324	LGM364
1	Lower Body	1	Ħ	P	ц	\$
2	Hydraulic assembly cylinder	1	RWH101B100	RWH121900	RCH202901	RCH603
3	Adaptor	1	n.a.	n.a.	n.a.	n.a.
4	Threaded base	1	۳	\	ψ	δ
5	Upper body	1	\$	×	§	k
6	Jaw	3	LGM313K4	LGH314K4	LGH324K4	LGH364K4
7	Strap	6	+	§	0	Ð
8	Jaw Screw	6	+	§	۲	0
9	Nut	6	+	§	۲	0
10	Pin	3	ж	B	Ц	
11	Base Screw	2	•	\diamond	ψ	δ
12	Support Nut	1	\$	×	§	k
13	Handle + Cap	1	☆	X	§	k
14	Spindle	1	LGH10K5	LGH14K5	LGH24K5	LGH253K5
15	Washer	1	n.a.	n.a.	n.a.	k
16	Point protector	1	SGM0704	LGH14K6	LGH24K6	LGH253K6
17	Set Screw	1	\$	X	§	k

- ☆ included in LGH310K2
- included in LGH310K3 included in LGH10K7

included in LGH314K2 § included in LGH314K3

◊ included in LGH14K7

§ included in LGH324K2 included in LGH324K3 ψ included in LGH24K7

𝔅 included in LGH364K2 (1) included in LGH364K3 δ included in LGH253K7



To maintain your warranty:

• Have your products inspected and repaired by an Enerpac Authorized Service Center

