

Repair Parts Sheet

RC15 Series Hydraulic Cylinders RC151, RC152 & RC154

Document Number	Revision	Revision Date	Product Date Code Beginning With
L4285	Rev. B	04/2021	С

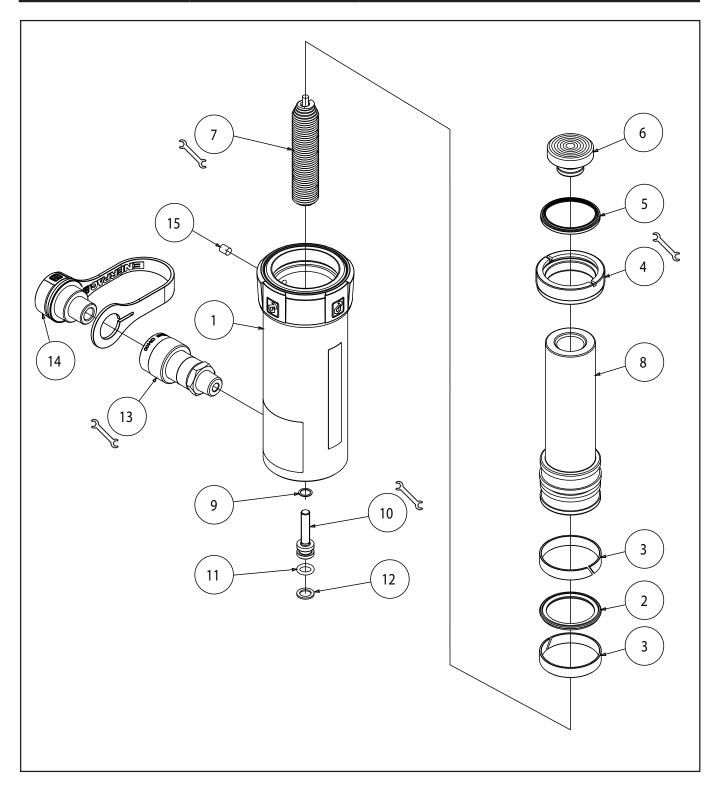


Figure 1, RC Hydraulic Cylinder, 15 Ton

Repair Parts List, Figure 1						
Item	Description	Qty	RC151	RC152	RC154	
1	Base	1	N/A	N/A	N/A	
2	Piston Seal	1				
3	Wear Band, Plunger	2	▲ ★	▲ ★	▲ ★	
4	Stop Ring	1	RC15044	RC15044	RC15044	
5	Wiper	1	*	* *	* *	
6	Saddle Assembly	1	A152G	A152G	A152G	
7	Spring Assembly	1	RC15K31	RC15K31	RC15K32	
8	Plunger	1	RC151040	RC152040	RC154040	
9	Copper Gasket	1				
10	Screw, Socket Head	1				
11	O-Ring	1				
12	Backup, Split	1				
13	Coupler	1	CR400	CR400	CR400	
14	Dust Cap 🔺	1	CD411	CD411	CD411	
15	Filter	1				
N/S	O-ring, coupler	1				
N/S	Enerpac Decal	1				
N/S	Warning Decal	1				
N/S	O-ring, saddle	1				
N/S	Thread Protector	1				

Notes:

▲ Indicated item included in and available as a part of the Repair Kit RC15NK0

■ Indicated item included in and available as a part of the Spring Assembly

Indicated item included in and available as packs of 10 units in Seal Kit RC15NKS (see below)

★ Indicated item included in and available as packs of 10 units in Wear Band Kit Plunger RC15NKB1 (see below)

* Indicated item included in and available as packs of 10 units in Wiper Kit RC15NKW (see below)

• ***** Kits only available in America



Item nr.	Torque/ remark		
4	Secure with Loctite 222 and torque to 70-90 in-lbs [7.9-10.2 Nm]		
7	Torque to 48-60 in-lbs [5.4-6.8 Nm]		
10	10 Torque to 90-110 in-lbs [10.2-12.4 Nm]		
13	Torque to 40-60 ft-lbs [54-81 Nm]		
	Use Loctite 545 or Teflon Tape		



www.enerpac.com